

SDD
Silca Diagnostic Device

SBB

SW- OPEL RKE-L0 / CB. -L1 (SDD/SBB)

CODE: D431388XA- VERS. 3.0



INDEX

1 OPEL REMOTE CONTROL FUNCTIONS MENU (Routine 5)	4
1.1 TLC PROGRAM	6
1.2 DELETE TLC	7
2 OPEL REMOTE CONTROL FUNCTIONS MENU (routine 6)	8
2.1 TLC PROGRAM	10
2.2 DELETE TLC	11
2.3 N.ro TLC IN MEM	12
3 OPEL REMOTE CONTROL FUNCTIONS MENU (routine 9)	13
3.1 TLC PROGRAM	15
3.2 DELETE TLC	16
4 OPEL CAN REMOTE CONTROLS FUNCTION MENU (Routine 10)	17
4.1 PROG. NEW KEYS	19
4.2 DELETE TLC	21
5 OPEL ATW REMOTE CONTROL FUNCTIONS MENU (Routine 11)	22
5.1 TLC PROGRAM	25
5.2 DELETE TLC	26

SW- OPEL RKE-L0 / CB.-L1 (SDD/SBB)

This SW upgrade makes it possible to:

- Add/Delete Remote Controls for the following vehicles:

MODEL	Year from	Year to	Rke	Page
OPEL VAUXHALL				
AGILA	2000		ORIGINAL	4
ASTRA	1995	1998	ORIGINAL	4
ASTRA	1998		ORIGINAL	4
CORSA[ATW]	2000		ORIGINAL	22
CORSA	2000		ORIGINAL	8
FRONTERA	1996	2002	ORIGINAL	13
MERIVA[ATW]	2002		ORIGINAL	22
MERIVA	2002		ORIGINAL	8-13
OMEGA[ATW]	1995	1999	ORIGINAL	22
OMEGA	1995	1999	ORIGINAL	4
VECTRA[ATW]	1998	1999	ORIGINAL	22
VECTRA	1998	1999	ORIGINAL	4
ZAFIRA[ATW]	1999		ORIGINAL	22
ZAFIRA	1999		ORIGINAL	4

This SW upgrade makes it possible to:

- Add/Delete Keys/Remote Controls for the following vehicles:

MODEL	Year from	Year to	Rke	Page
OPEL VAUXHALL				
SIGNUM[CAN]	2003		ORIGINAL	17
VECTRA[CAN]	2004		ORIGINAL	17
HOLDEN				
VECTRA[CAN]	2003		ORIGINAL	17

ATTENTION: to use SDD with the models listed (CAN) you NEED the CAN BUS Switch Adapter Code D726833ZB.

NOTE Silca S.p.A. does not provide any type of remote control for any of the models listed.

OPEL VAUXHALL REMOTE CONTROLS

1

OPEL REMOTE CONTROL FUNCTIONS MENU (ROUTINE 5)

MODEL	Year from	Year to	Rke	Rke N.	Cable	Connector Pos. (F3-F4)	Direct Progr. (F2)	Routine
AGILA	2000		ORIGINAL	5	00	C13		5
ASTRA	1995	1998	ORIGINAL	5	00-02	C5		5
ASTRA	1998		ORIGINAL	5	00	C6		5
OMEGA	1995	1999	ORIGINAL	5	00-02	C5		5
VECTRA	1998	1999	ORIGINAL	5	00	C6		5
ZAFIRA	1999		ORIGINAL	5	00	C6		5

The functions on these vehicles are:

- Delete all remote controls;
- Add a single remote control.

Up to a maximum of 5 remote controls can be programmed simultaneously..

To make use of this function, for the model listed, use:


	 SWITCH ADAPTER
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997
New key/s (Max 5)	PIN CODE  4 digit numerical On the Car Pass label
	

Fig. 1

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997

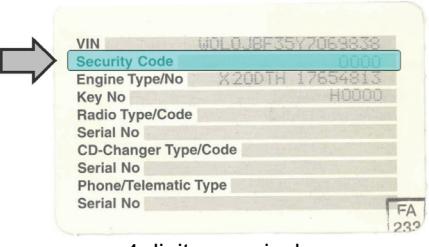Fig. 2

WHERE TO FIND THE PLUG DIAGNOSTICS

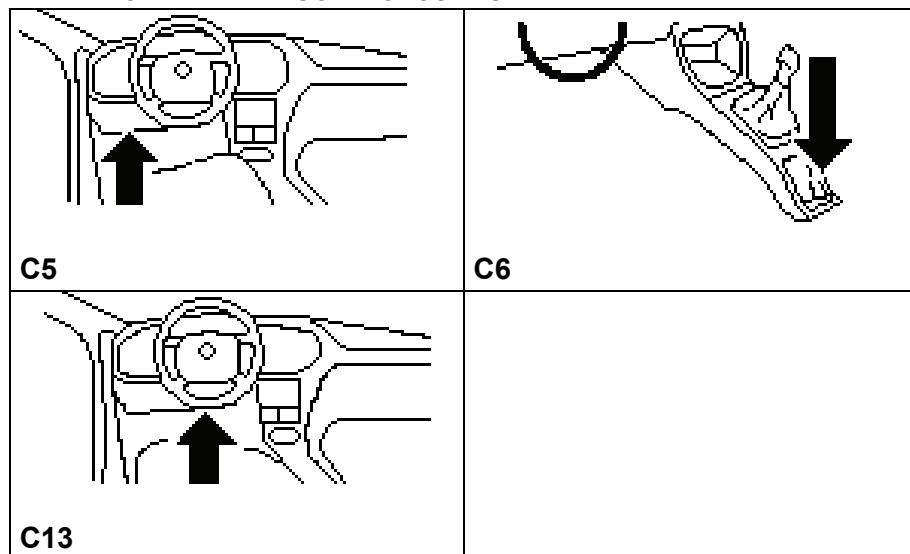


Fig. 3

From the "REMOTE CONTROLS" menu select the specific vehicle model and press **ENTER**:

Insert the key
and turn on
the console

(ESC) 

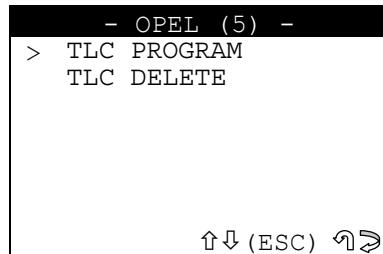
NOTE

One remote control only is associated to each single key. Therefore the number of remote controls enabled will be the same as the number of operational keys (max. 5).

ATTENTION: If the remote control to be programmed is located in the head of the key (operational), fit the key into the ignition and programme the remote control.

- Press **ESC** to quit;
- Fit a key into the block and turn to the **ON position**;
- Press **ENTER** to continue.

The display will show:




- Select and press **ENTER**.

1.1 TLC PROGRAM

This function is used to add remote controls.

- To activate the function select “**TLC PROGRAM**” and press **ENTER**.

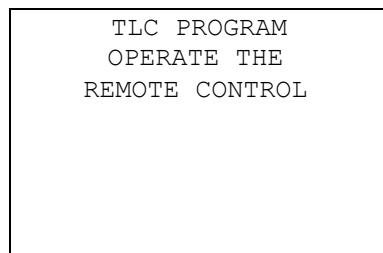
The display will show:



- Press any key on the remote control to be programmed (within 10 seconds).

If no key on the remote control is pressed within 10 seconds or if the remote control is not compatible with the selected vehicle model, a msg [ERROR 6] appears and you are returned to the main menu.

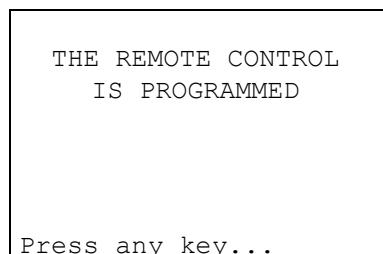If the SDD/SBB programming procedure is successful, the display will show:



The remote control is now programmed and operational.

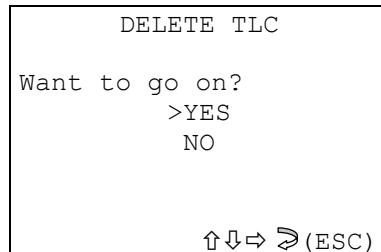
- Press any key to return to the main menu.

1.2 DELETE TLC

This function is used to delete all the remote controls.


- To activate the function, select “**DELETE TLC**” and press **ENTER**.

The display will show:



- Select YES/NO and press ENTER;
- No, returns to the previous menu;
- Yes, proceeds with deleting all the remote controls.

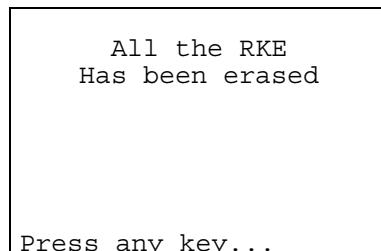The display will show:



All the remote controls are now deleted.

- Press any key to continue and return to the main menu.

OPEL REMOTE CONTROL FUNCTIONS MENU (ROUTINE 6)

MODEL	Year from	Year to	Rke	Rke N.	Cable	Connector Pos. (F3-F4)	Direct Progr. (F2)	Routine
OPEL VAUXHALL								
CORSA	2000		ORIGINAL	5	00	C11		6
MERIVA	2002		ORIGINAL	5	00			6

The functions on these vehicles are:

- Delete all remote controls;
- Add remote controls;
- Read the number of TLCs programmed.

Up to a maximum of 5 remote controls can be programmed simultaneously.

To make use of this function, for the model listed, use:

	 SWITCH ADAPTER																				
	 CABLE OBDII [00] (STANDARD)																				
	 <table border="1" style="border-collapse: collapse; width: fit-content; margin-left: 10px;"> <tr><td>VIN</td><td>W0L0UEB35Y7069838</td></tr> <tr><td>Security Code</td><td>0000</td></tr> <tr><td>Engine Type/No</td><td>X200TH 17854913</td></tr> <tr><td>Key No</td><td>H0000</td></tr> <tr><td>Radio Type/Code</td><td></td></tr> <tr><td>Serial No</td><td></td></tr> <tr><td>CD-Changer Type/Code</td><td></td></tr> <tr><td>Serial No</td><td></td></tr> <tr><td>Phone/Telematic Type</td><td></td></tr> <tr><td>Serial No</td><td>FA 1239</td></tr> </table> <p style="text-align: center;">4 digit numerical On the Car Pass label</p>	VIN	W0L0UEB35Y7069838	Security Code	0000	Engine Type/No	X200TH 17854913	Key No	H0000	Radio Type/Code		Serial No		CD-Changer Type/Code		Serial No		Phone/Telematic Type		Serial No	FA 1239
VIN	W0L0UEB35Y7069838																				
Security Code	0000																				
Engine Type/No	X200TH 17854913																				
Key No	H0000																				
Radio Type/Code																					
Serial No																					
CD-Changer Type/Code																					
Serial No																					
Phone/Telematic Type																					
Serial No	FA 1239																				

Fig. 4

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)

Fig. 5

WHERE TO FIND THE PLUG DIAGNOSTICS

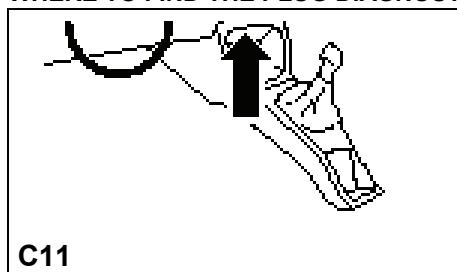


Fig. 6

From the “REMOTE CONTROLS” menu select the specific vehicle model and press **ENTER**:

Insert the key
and turn on
the console

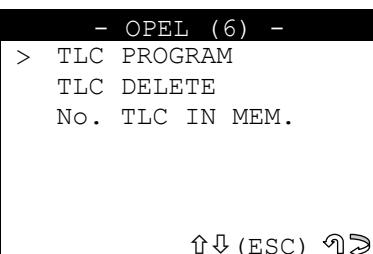
(ESC) ↵

NOTE One remote control only is associated to each single key. Therefore the number of remote controls enabled will be the same as the number of operational keys (max. 5).

ATTENTION: If the remote control to be programmed is in the head of the key (operational), fit the key into the ignition and programme the remote control.

- Press ESC to quit;
- Fit a key into the block and turn to the ON position;
- Press **ENTER** to continue.

The display will show:




- Select and press **ENTER**.

2.1 TLC PROGRAM


This function is used to add remote controls.

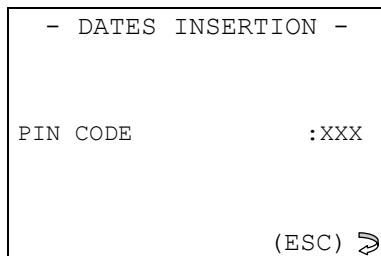- To activate the function select “**TLC PROGRAM**” and press **ENTER**.
The display will show:



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 4 page 8);
- Press **ENTER** to continue.

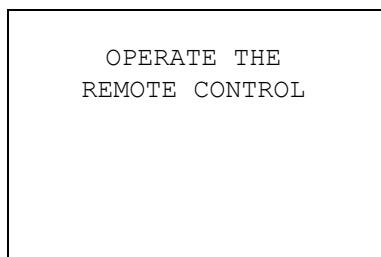
If the Security code is wrong a msg [ERROR 4] will appear and you are returned to the main menu; if the code is correct, the operation proceeds:



- Press any key on the remote control to be programmed (within 10 seconds).

If no key on the remote control is pressed within 10 seconds or if the remote control is not compatible with the selected vehicle model, a msg [ERROR 6] will appear and you are returned to the main menu.

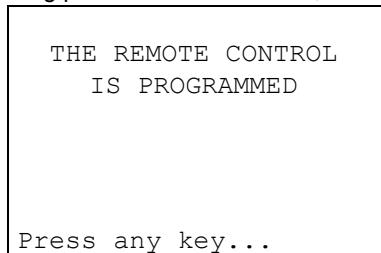If the SDD/SBB programming procedure is successful, the display will show:




The remote control is now programmed and operational.

- Press any key to return to the main menu.

2.2 DELETE TLC


This function is used to delete all the remote controls.

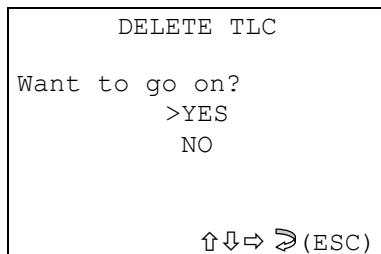- To activate the function select “**DELETE TLC**” and press **ENTER**.
The display will show:




- Select YES/NO and press ENTER;
- No, returns to the main menu;
- Yes, proceeds to delete all the remote controls.

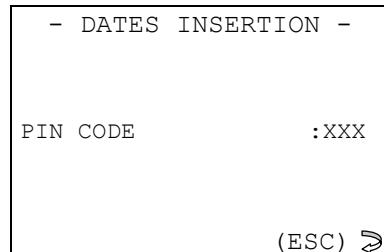The display will show:



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 4 page8);
- Press **ENTER** to continue.

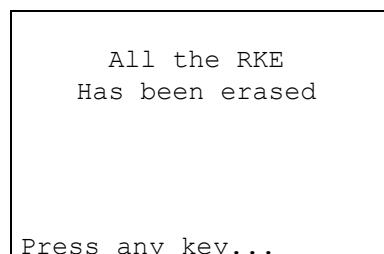If the Security code is wrong a msg [ERROR 4] appears and you are returned to the main menu; if the code is correct, the operation proceeds:



All remote controls are now deleted.

- Press any key to continue and return to the main menu.

2.3 N.RO TLC IN MEM.

This function is used to read how many remote controls have been memorized.

- To activate the function select “**No. TLC IN MEM**” and press **ENTER**.
The display will show::

TLC 1	STATE
TLC 2	"
TLC 3	"
TLC 4	"
TLC 5	"
Press any key...	

The five lines indicate the 5 positions in the memory of the remote controls in the central control unit. Each position has a corresponding STATE:

- PROG -> Remote control programmed;
- NOT PROG-> Remote control not programmed;
- Press any key to return to the main menu.

OPEL REMOTE CONTROL FUNCTIONS MENU (ROUTINE 9)

MODEL	Year from	Year to	Rke	Rke N.	Cable	Connector Pos. (F3-F4)	Direct Progr. (F2)	Routine
OPEL VAUXHALL								
FRONTERA	1996		ORIGINAL	5	00-02	C16		9

The functions on these vehicles are:

- Delete all remote controls;
- Add a single remote control.

Up to a maximum of 5 remote controls can be programmed simultaneously.

To make use of this function, for the model listed, use:


	 SWITCH ADAPTER
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997
	PIN CODE  VIN: W0L0JBE35Y7063838 Security Code: 0000 Engine Type/No: X200TH 12854813 Key No: H0000 Radio Type/Code: Serial No: CD-Changer Type/Code: Serial No: Phone/Telematic Type: Serial No: FA 239 4 digit numerical On the Car Pass label
	REMOTE CONTROL TO BE PROGRAMMED

Fig. 7

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997

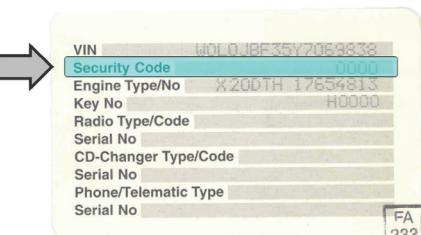Fig. 8

WHERE TO FIND THE PLUG DIAGNOSTICS


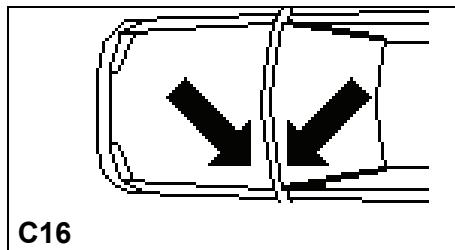


Fig. 9

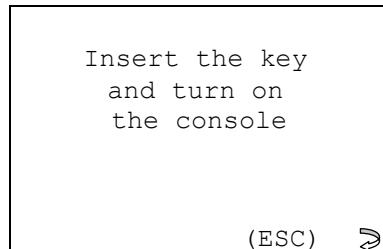Select the specific vehicle model from the “REMOTE CONTROLS” menu and press **ENTER**:



NOTE

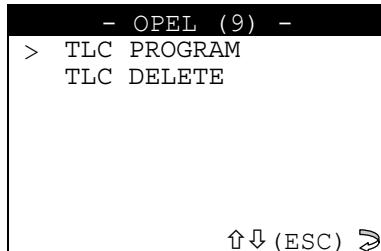
One remote control only is associated to each single key. Therefore the number of remote controls enabled will be the same as the number of operational keys (max. 5).

ATTENTION:

If the remote control to be programmed is in the head of the key (operational), fit the key into the ignition and programme the remote control.

- Press ESC to quit;
- Fit a key into the block and turn to the ON position;
- Press **ENTER** to continue.

The display will show:




- Select and press **ENTER**.

3.1 TLC PROGRAM

This function is used to add remote controls.

- To activate the function select “**TLC PROGRAM**” and press **ENTER**.

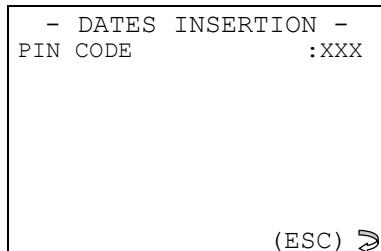
The display will show:



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 7 page 13);
- Press **ENTER** to continue.

The vehicle begins remote control programming. If the Security Code is wrong or if there are communication errors, the display will show a msg [ERROR 1] (see operating manual - Ch. on errors).

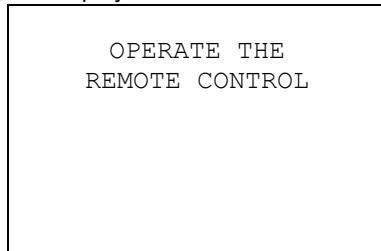
If there are no problems, the display will show:



- Press any key on the remote control to be programmed (within 10 seconds).

If no key is pressed on the remote control within 10 seconds or if the remote control is not compatible with the selected vehicle model, the display will show a msg [ERROR 6] and you are returned to the main menu.

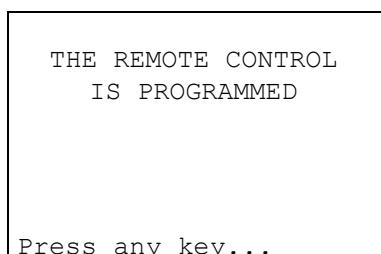If the SDD/SBB programming procedure has been carried out successfully, the display will show:




The remote control is now programmed and operational.

- The remote control is now programmed and operational.

3.2 DELETE TLC


This function is used to delete all the remote controls.

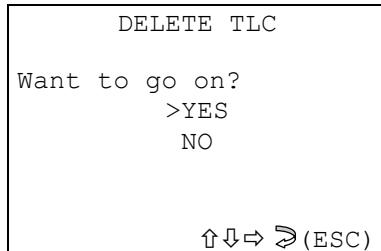- To activate the function select “**DELETE TLC**” and press **ENTER**.
The display will show:



- Select YES/NO and press ENTER;
- No, returns to the main menu;
- Yes, proceeds with deleting all the remote controls.

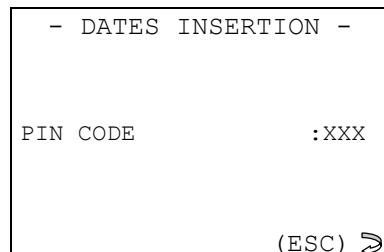
The display will show:



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 7 page 13);
- Press **ENTER** to continue.

The vehicle begins remote control deletion.

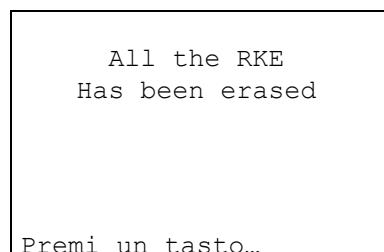If the Security code is wrong a msg [ERROR 1] appears (see operating manual - Ch. on errors) and you are returned to the main menu; if the code is correct, the operation proceeds:



All the remote controls are deleted.

Press any key to continue and return to the main menu.

OPEL CAN REMOTE CONTROLS FUNCTION MENU (ROUTINE 10)

New generation vehicles use a new communication technology known as CAN BUS (Controller Area Network). This system has been designed to avoid the problem in modern vehicles of overcrowded electrical wiring due to electronically controlled functions. On most vehicles today a single electrical wire serves a single function, i.e. it powers a given component or receives or sends given information. CAN makes use of a «multiplex» network connection that links the various central control units and transmits data and controls along a single line (aka «data bus»).

OPERATING NOTES

MODEL	Year from	Year to	Rke	Rke N.	Cable	Connector Pos. (F3-F4)	Direct Progr. (F2)	Routine
OPEL VAUXHALL								
SIGNUM [CAN]	2003		ORIGINAL	5	00			10
VECTRA [CAN]	2004		ORIGINAL	5	00	C6		10
HOLDEN								
VECTRA [CAN]	2004		ORIGINAL	5	00	C6		10

The functions on these vehicles are:

- Delete all the keys/remote controls;
- Add a key or remote control;
- Read the number of remote controls programmed.

Up to a maximum of 5 keys/remote controls can be programmed simultaneously.

ATTENTION: The new generation OPEL keys integrate the Remote Control Function inside the transponder. When a key is programmed the remote control associated to it is also programmed automatically.

To make use of this function, for the model listed, use:


	 Switch Adapter CAN BUS - D726833ZB
 CABLE OBDII [00] (STANDARD)	 OPEL Car Pass
 Key/remote control to be programmed	 <p>VIN W01D10BF35Y2053838 Security Code 0000 Engine Type/No X200TH 17854813 Key No H0000 Radio Type/Code Serial No CD-Changer Type/Code Serial No Phone/Telematic Type Serial No FA 232</p> <p>4 digit numerical On the Car Pass label PIN CODE</p>

Fig. 10

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)

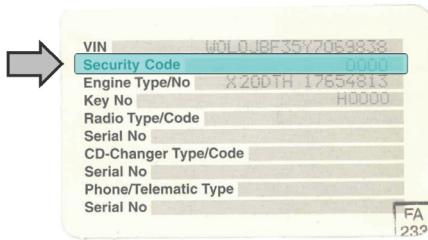Fig. 11

WHERE TO FIND THE PLUG DIAGNOSTICS


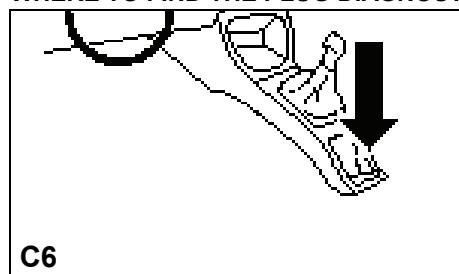



Fig. 12

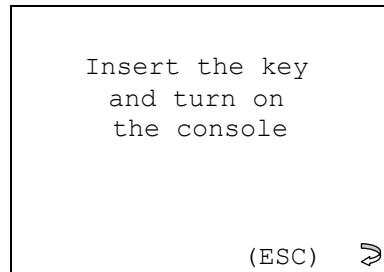Select the specific vehicle model from the “**REMOTE CONTROLS**” menu and press **ENTER**:



- Press **ESC** to quit;
- Fit a key into the block and turn to the ON position;
- Press **ENTER** to continue.

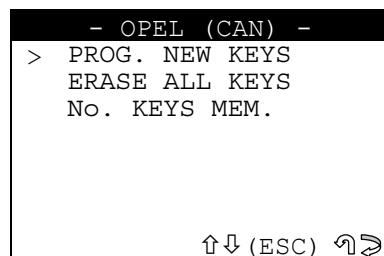The display will show:




Select and press **ENTER**.

4.1 PROG. NEW KEYS


Questa funzione permette di aggiungere Chiavi/Telecomandi nell'immobilizer.

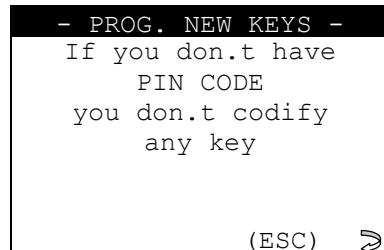- To activate the function select “**PROG. NEW KEYS**” and press **ENTER**.
The display will show:



- Press ESC to quit;
- Press ENTER to continue;

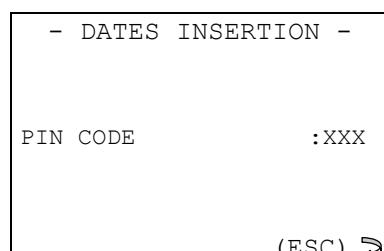The display will show:




- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 10 page 18);
- Press **ENTER** to continue.

The vehicle begins programming the keys/remote controls.


If the Security code is wrong or there are communication errors the display will show a msg [ERROR 4] (see operating manual - Ch. on errors).

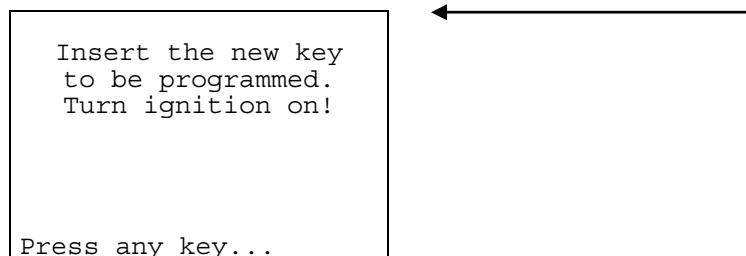If there are no problems, the display will show (**):




- Fit the key/remote control to be programmed into the block and turn to the ON position;
- Press any key to continue.

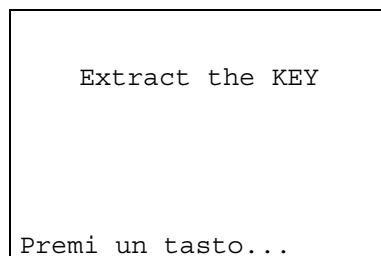The display will show:



- Remove the key/remote control from the block;
- Press any key to continue.

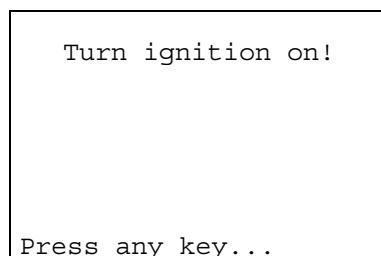
The display will show:



- Re-insert the key to be programmed and turn to the **ON position**;
- Press any key to continue.

If there are communication errors or if the key used is wrong, the display will show a msg [ERROR 5] (see operating manuale - Ch. errors).

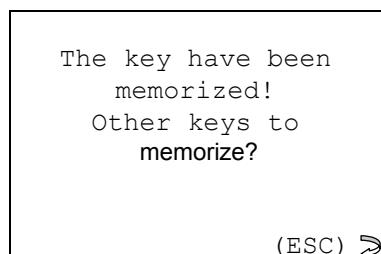If there are no problems, the display will show:




- Press **ENTER** to programme other keys (repeat operations from (**));
- Press **ESC** to go to data archiving.

4.2 DELETE TLC


This function is used to delete all keys/remote controls.

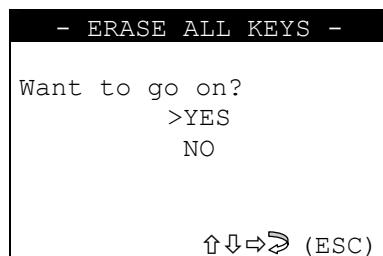- To activate the function select “**ERASE ALL KEYS**” and press ENTER.
The display will show:



- Select YES/NO and press ENTER;
- No, returns to the previous menu;
- Yes, proceeds with deleting all the remote controls.

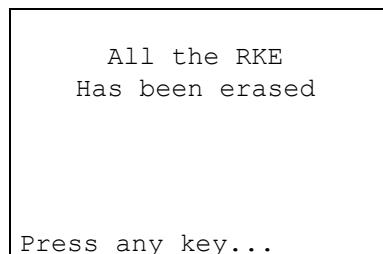The display will show:



NOTES: If the remote control to be programmed is located in the head of the key, fit the key into the ignition and programme the remote control.

5**OPEL ATW REMOTE CONTROL FUNCTIONS MENU (ROUTINE 11)**

ATW vehicles are cars that have an IMMOBILIZER anti-start device, as well as a supplementary anti-theft device which is usually fitted by the vehicle manufacturer.

These vehicles are distinguished by the key shown in the Fig. 13, located on the central module.

MODEL	Year from	Year to	Rke	Rke N.	Cable	Connector Pos. (F3-F4)	Direct Progr. (F2)	Routine
OPEL VAUXHALL								
CORSA [ATW]	2000		ORIGINAL	5	00	C11		11
MERIVA [ATW]	2002		ORIGINAL	5	00			11
OMEGA [ATW]	1995	1999	ORIGINAL	5	00-02	C5		11
VECTRA [ATW]	1998	1999	ORIGINAL	5	00	C5		11
ZAFIRA [ATW]	1999		ORIGINAL	5	00	C6		11



Fig. 13

The functions on these vehicles are:

- Delete all remote controls;
- Add a remote control.

Up to a maximum of 5 remote controls can be programmed simultaneously.

To make use of this function, for the model listed, use:


	 SWITCH ADAPTER
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997
	 4 digit numerical On the Car Pass label
	

Fig. 14

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)
	 CABLE OPEL [02] (OPTIONAL) D722733ZB For models <1997

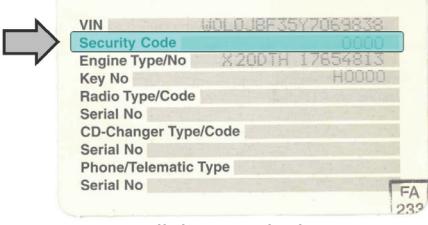Fig. 15

WHERE TO FIND THE PLUG DIAGNOSTICS


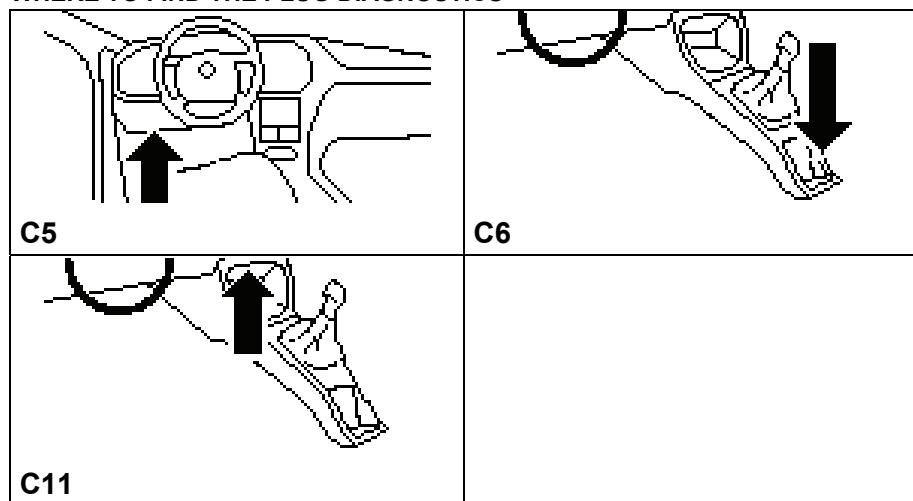


Fig. 16

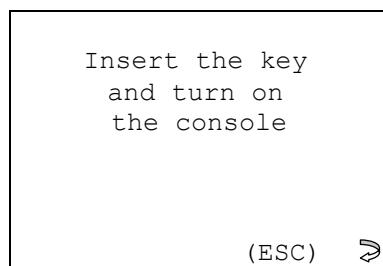Select the specific vehicle model from the "REMOTE CONTROLS" menu and press **ENTER**:




NOTE One remote control only is associated to each single key. Therefore the number of remote controls enabled will be the same as the number of operational keys (max. 5).

ATTENTION: If the remote control to be programmed is located in the head of the key (operational), fit the key into the ignition and programme the remote control.

- Press **ESC** to quit;
- Fit a key into the block and turn to the ON position;
- Press **ENTER** to continue.

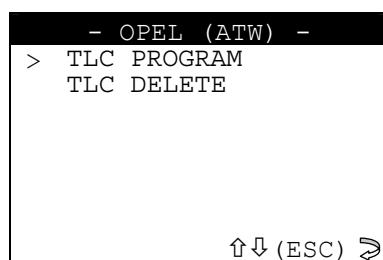The display will show:




- Press **ESC** to quit;
- Select and press **ENTER**.

5.1 TLC PROGRAM


This function is used to add remote controls.

- To activate the function select “**TLC PROGRAM**” and press **ENTER**.

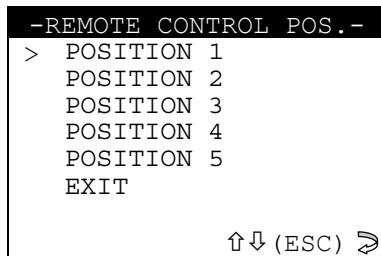The display will show:



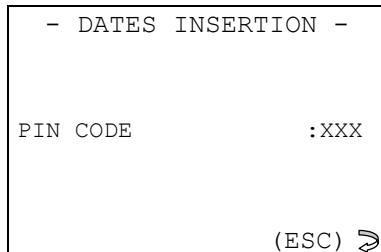
- Select ESC to return to the main menu.
- Select any position to programme two remote controls in the same position without creating problems. Press **ENTER**.



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card see Fig. 14 page 23);
- Press **ENTER** to continue.

The vehicle programmes the remote control. If the Security code is wrong or if there are communication errors, the display will show a msg [ERROR 4] (see operating manual - Ch. on errors).

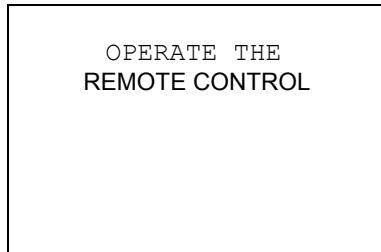
If there are no problems the display will show:



- Press any key on the remote control to be programmed (within 10 seconds).

If no key is pressed on the remote control within 10 seconds, or if the remote control is not compatible with the selected vehicle model, the display will show a msg [ERROR 6] and you are returned to the main menu.

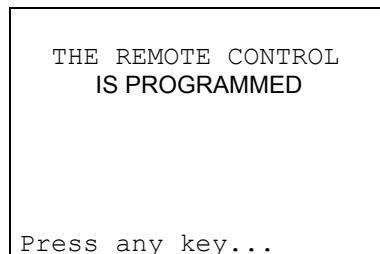If the SDD/SBB programming procedure has been carried out successfully, the display will show:



The remote control is programmed and operational.

- Press any key to return to the main menu.

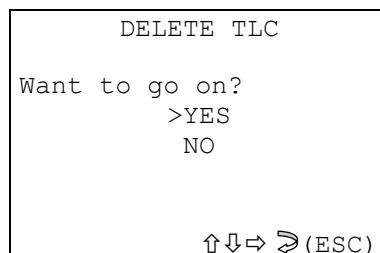
Two remote controls can be programmed in the same position without creating problems.

5.2

DELETE TLC


This function is used to delete all the remote controls.

- To activate the function select "**DELETE TLC**" and press **ENTER**.
The display will show:




- Select YES/NO and press ENTER;
- No, returns to the previous menu;
- Yes, proceeds with deleting all the remote controls.

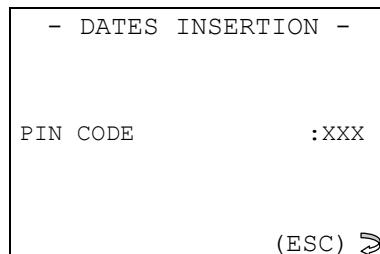The display will show:



- Press ESC to quit;
- Insert the SECURITY CODE (secret four-digit number on the CAR PASS card, see Fig. 14 page 23);
- Press **ENTER** to continue.

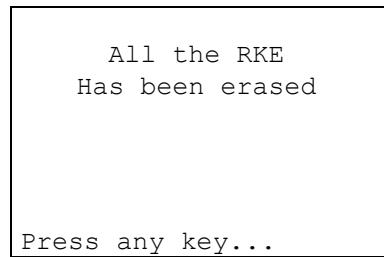The vehicle deletes the remote controls. If the Security code is wrong the display will show a msg [ERROR 4] (see operating manual - Ch. on errors) and you are returned to the main menu.
If the code is correct, the operation proceeds:



All remote controls are now deleted.
Press any key to continue and return to the main menu.



SILCA S.p.A.
Via Podgora, 20 (Z.I.)
31029 VITTORIO VENETO (TV)
Tel. 0438 9136 Fax 0438 913800
www.silca.it

In the United Kingdom

SILCA Ltd.
Kimpton Road - Sutton
SURREY SM3 9QP
Tel. 0208 6416515
Fax 0208 6441181
E-mail: sales@silcalt.co.uk

In Germany

SILCA GmbH
Siemensstrasse, 33
42551 VELBERT
Tel. 02051 2710
Fax 02051 271172
E-mail: info@silca.de

In France

SILCA S.A.
78440 PORCHEVILLE
Tel. 01 30983500
Fax 01 30983501
E-mail: info@silca.fr

In Spain

SILCA KEY SYSTEMS S.A.
C/Santander 73A
BARCELONA - SPAIN
Tel. 0034 934981400
Fax 0034 932788004
E-mail: silca@silca.es

Members of the Kaba Group

KABA®